

# CBR300R/RA and CB300F/FA Service Manual

## CONTENTS

	<b>GENERAL INFORMATION</b>	<b>1</b>
	<b>FRAME/BODY PANELS/EXHAUST SYSTEM</b>	<b>2</b>
	<b>MAINTENANCE</b>	<b>3</b>
<b>ENGINE/DRIVE TRAIN ELECTRICAL</b>	<b>PGM-FI SYSTEM</b>	<b>4</b>
	<b>IGNITION SYSTEM</b>	<b>5</b>
	<b>ELECTRIC STARTER</b>	<b>6</b>
	<b>FUEL SYSTEM</b>	<b>7</b>
	<b>COOLING SYSTEM</b>	<b>8</b>
	<b>LUBRICATION SYSTEM</b>	<b>9</b>
	<b>CYLINDER HEAD/VALVES</b>	<b>10</b>
	<b>CYLINDER/PISTON</b>	<b>11</b>
	<b>CLUTCH/GEARSHIFT LINKAGE</b>	<b>12</b>
	<b>ALTERNATOR/STARTER CLUTCH</b>	<b>13</b>
	<b>CRANKCASE/CRANKSHAFT/TRANSMISSION/BALANCER</b>	<b>14</b>
	<b>ENGINE REMOVAL/INSTALLATION</b>	<b>15</b>
	<b>CHASSIS</b>	<b>FRONT WHEEL/SUSPENSION/STEERING</b>
<b>REAR WHEEL/SUSPENSION</b>		<b>17</b>
<b>HYDRAULIC BRAKE</b>		<b>18</b>
<b>ANTI-LOCK BRAKE SYSTEM (ABS; CBR300RA/CB300FA)</b>		<b>19</b>
<b>FRAME ELECTRICAL</b>	<b>BATTERY/CHARGING SYSTEM</b>	<b>20</b>
	<b>LIGHTS/METERS/SWITCHES</b>	<b>21</b>
	<b>WIRING DIAGRAMS</b>	<b>22</b>
	<b>INDEX</b>	<b>23</b>
	<b>A FEW WORDS ABOUT SAFETY</b>	